

Vertical Pole Top




Vertical Pole Bottom




Horizontal Bar



Brace Rod

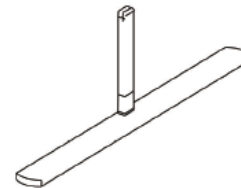


Foot

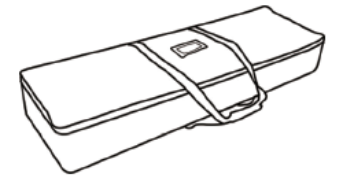


Bag


Qseg Setup Manuel

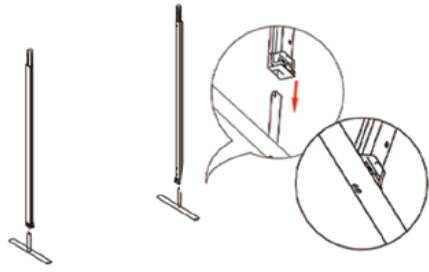


①

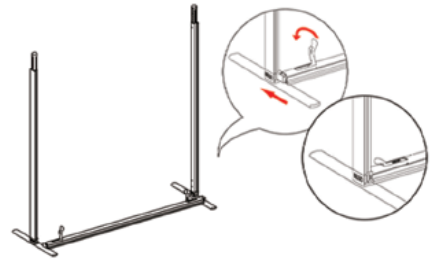


②

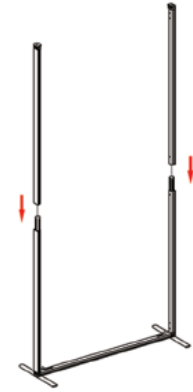


③

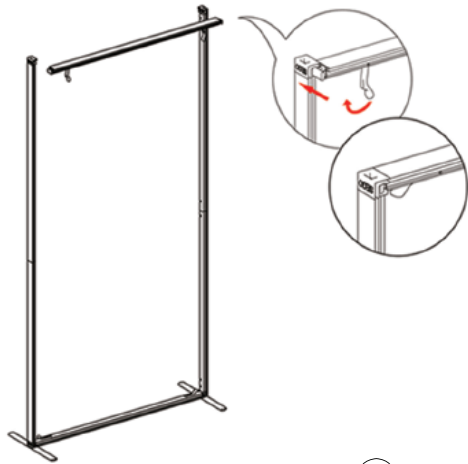

④


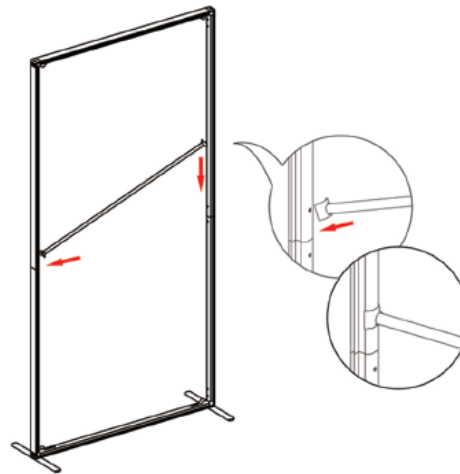


⑤

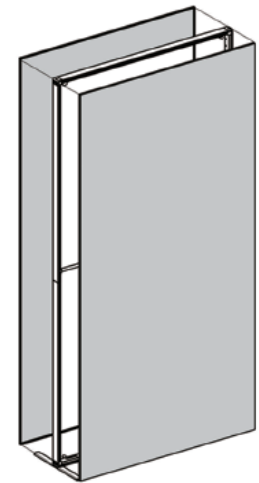


⑥


# Qseg 2 Frames Connection

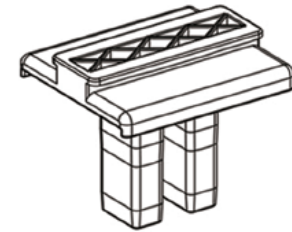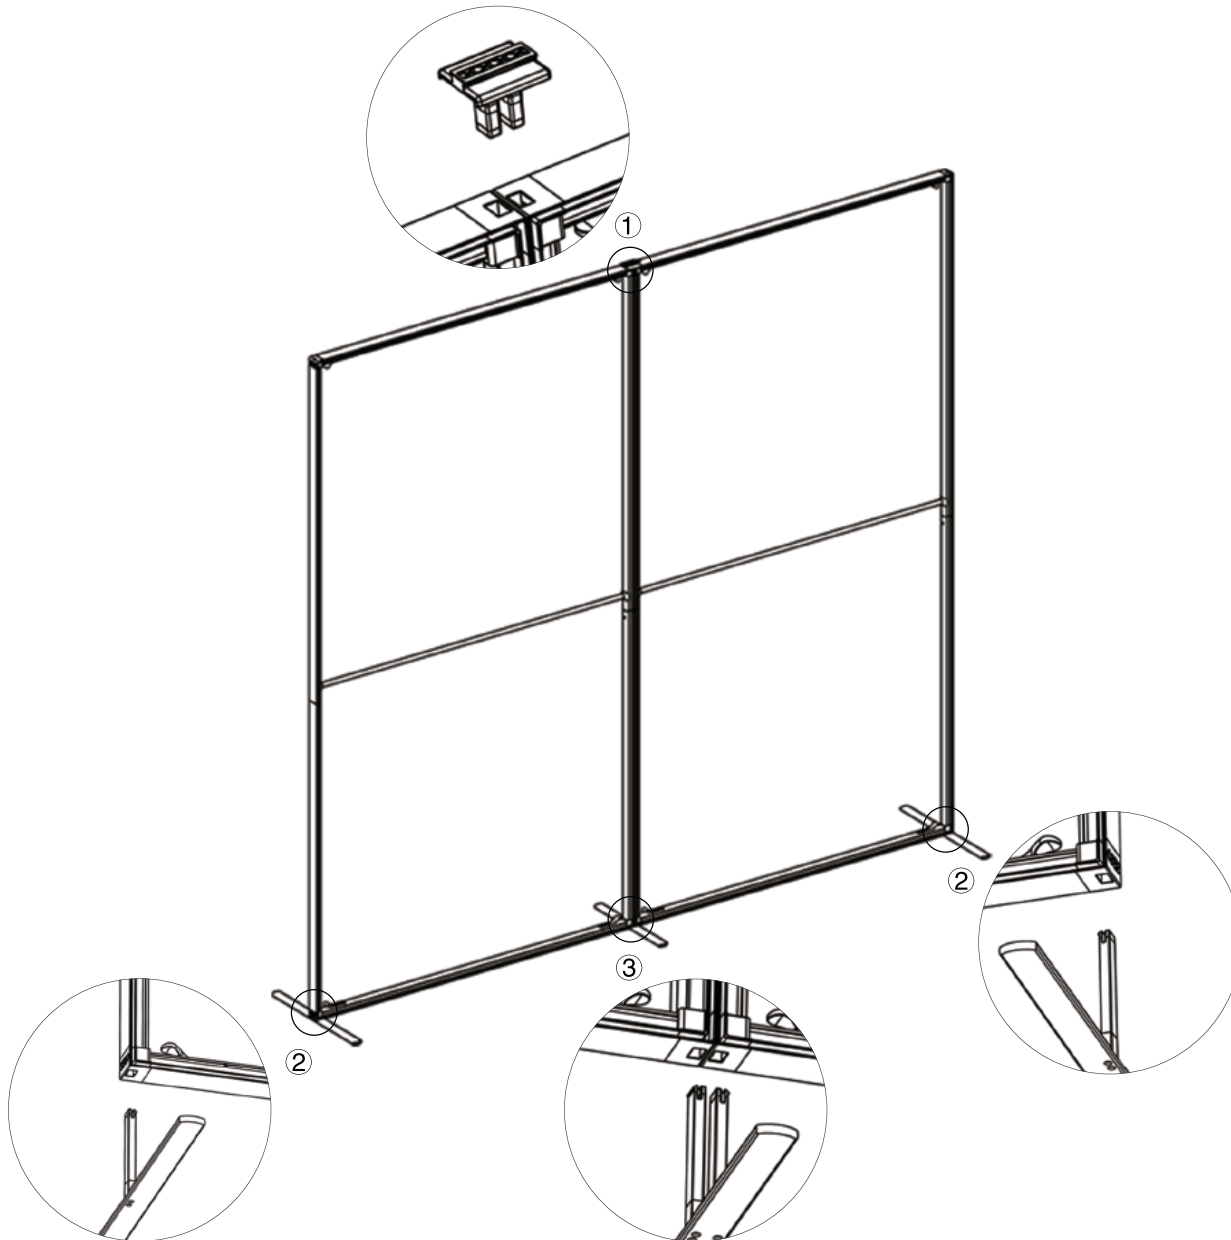

① Straight Connector


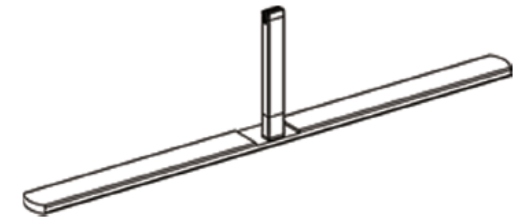


② Foot Full

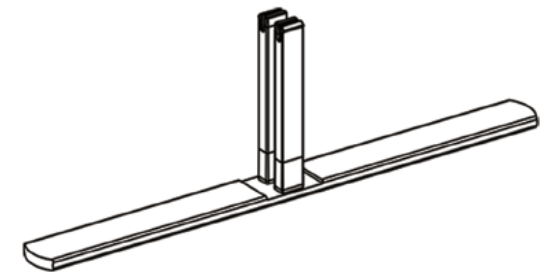


③ Twin Pole Foot


# Qseg 3 Frames Connection

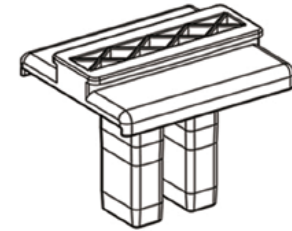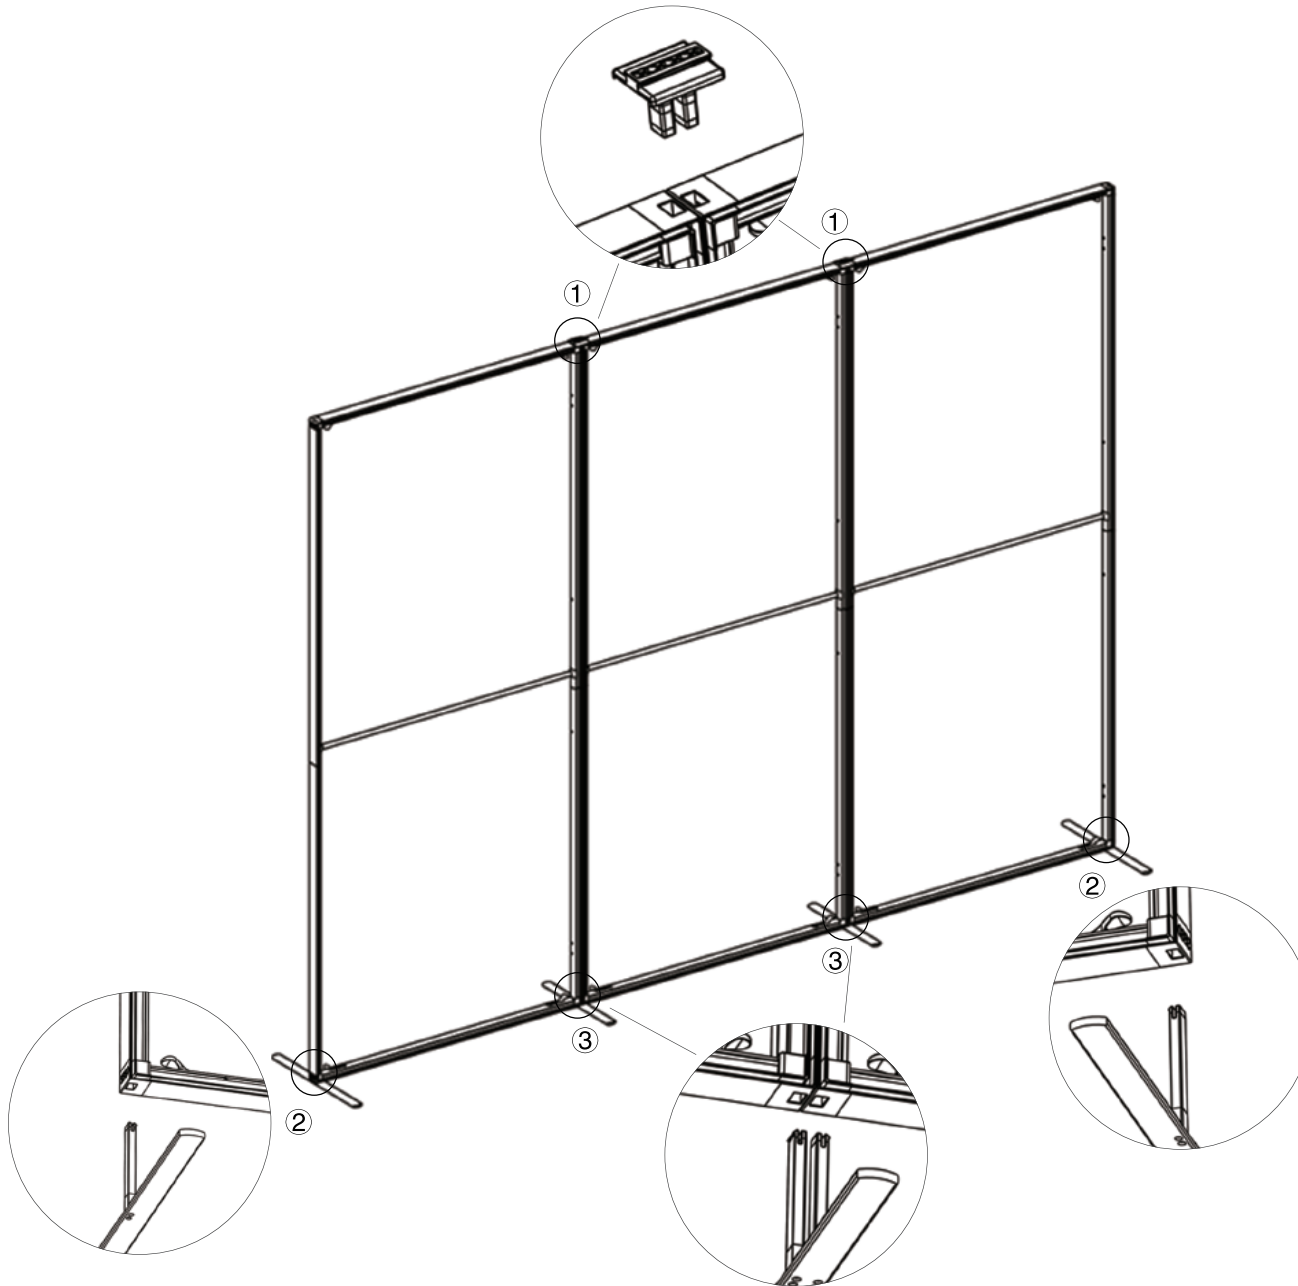

① Straight Connector

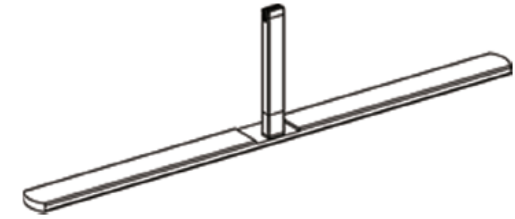

② Foot Full

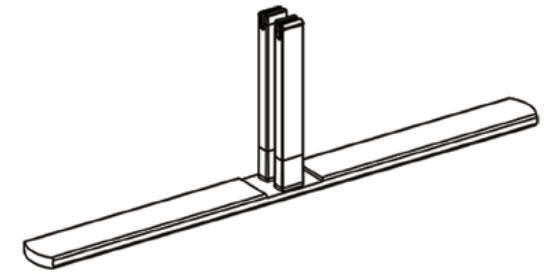

③ Twin Pole Foot